HEWLETT® PACKARD

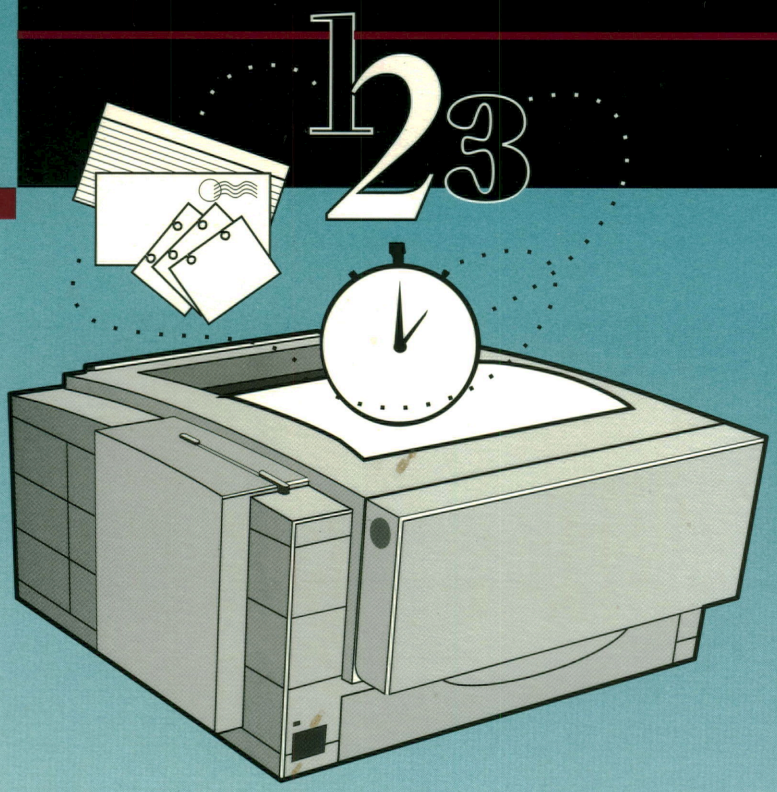

LaserJet 5P & 5MP

Quick Reference Guide

LaserJet
LaserJet
LaserJet
LaserJet
LaserJet
LaserJet
LaserJet
LaserJet
LaserJet

First Time Users
Read "Getting Started"
in User's Manual

Printer Parts

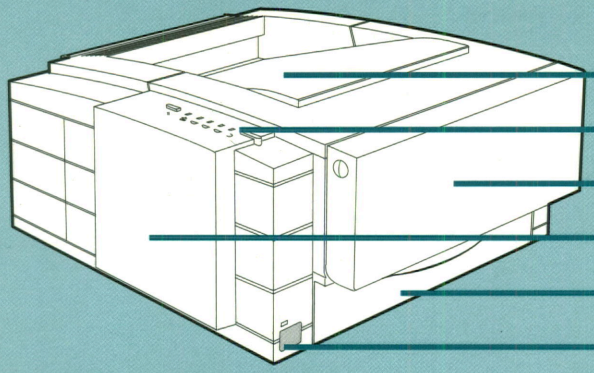

Front

- Top Output Tray
- Status Panel
- Tray 1 (Multi-Purpose or MP Tray)
- Removable Side Panel
- Tray 2 (Paper Cassette)
- Infrared Port and Status Light

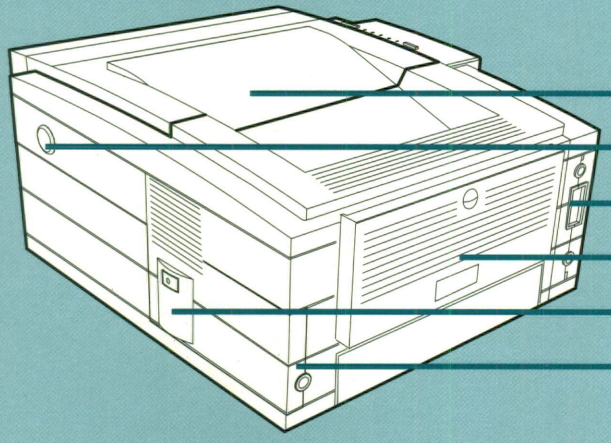

Back

- Top Cover
- Top Cover Release Button
- Interface Cable Door
- Rear Output Tray
- On/Off Button
- Power Cable Door

Toner Cartridge Installation

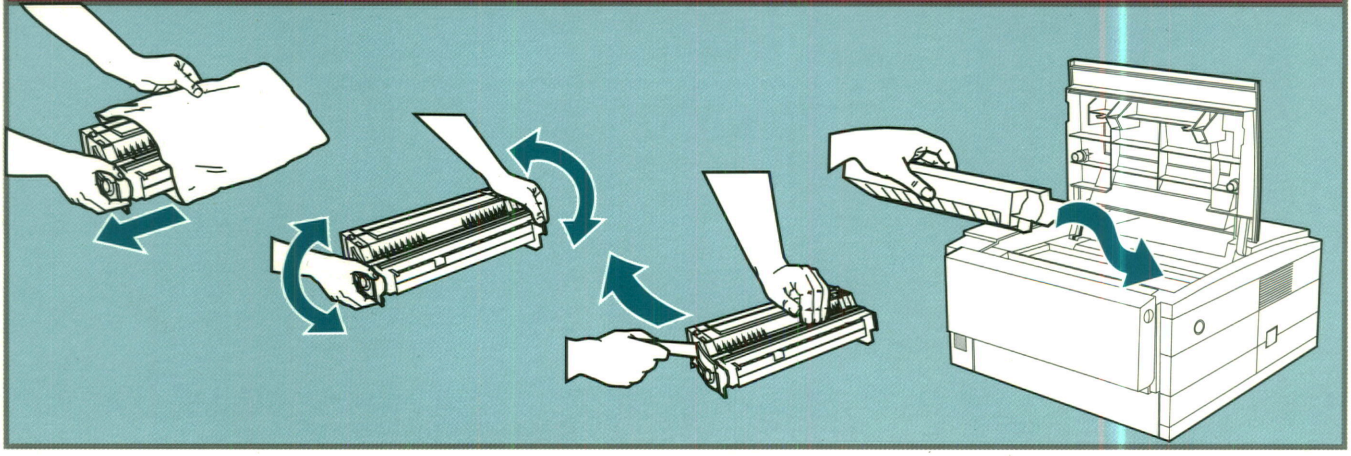

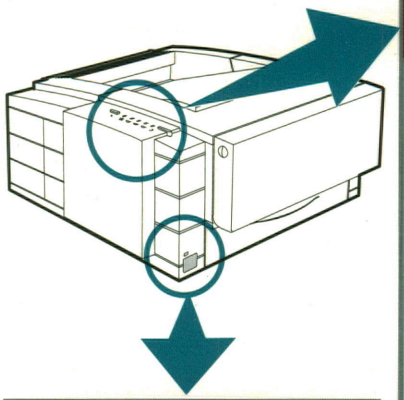

Infrared Port

The status light indicates connection is established.

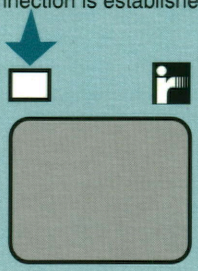

Status Panel

RESET BUTTON — Press this button only if you want to remove all data from the printer.

ERROR — This light indicates that there is an error in the printer.

TRAY 1 — This light indicates that you need to add paper to Tray 1.

TRAY 2 — This light indicates that you need to add paper to Tray 2.

DATA — This light indicates that the printer has internal unprinted data.

READY — This light indicates that the printer is ready to receive data.

GO BUTTON — Press this button to instruct the printer to resume printing after an error.

Light Patterns and Suggested Actions

Lights

Crosshatch means flashing light.

Solid means steady light.

Ready

No action is needed.

Data in Printer

Pressing the GO button will print the data in the printer.

Processing

No action is needed.

Warm Up/ Self Test

No action is needed.

Tray 1 Empty

Add paper or envelopes to Tray 1.

Tray 2 Empty

Add paper to Tray 2.

Manual Feed

Put paper or envelopes in Tray 1, and press the GO button.

Error Light Patterns

Paper Jam/ Door Open/ No Toner Cartridge

Clear the jam, close the printer's top cover, or install the toner cartridge.

Data Error

Press the GO button. Your job will print; however, some data will be lost. Refer to the Troubleshooting section in the User's Manual.

SIMM Error

OR

Refer to the Troubleshooting section in the User's Manual.

Fatal Error

Refer to the Troubleshooting section in the User's Manual.

Troubleshooting

How to Avoid Common Printer Operation Problems

- Make sure the printer is plugged in.
- Make sure power is turned on.
- Make sure all cables are securely connected.
- Make sure your software is properly installed.

How to Avoid Paper Jams

- Load paper into Tray 2 correctly. Make sure paper is under corner metal clip.
- Make sure your print media meets specifications and is in good condition.
- Do not overfill Tray 1 or Tray 2.
- Make sure Tray 2 is inserted completely into the printer.

How to Clear Paper Jams

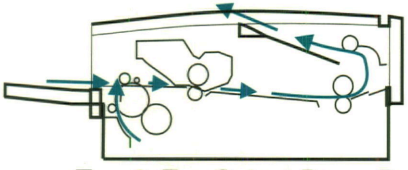

Tray 2, Top Output Paper Path

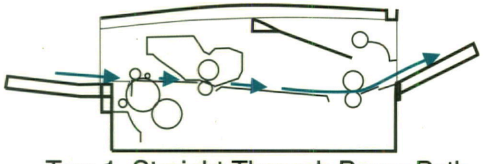

Tray 1, Straight Through Paper Path

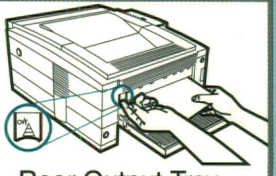

Rear Output Tray

Toner Cartridge Area

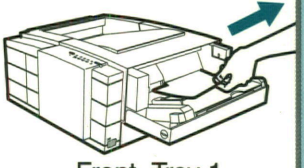

Front, Tray 1

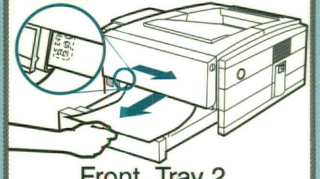

Front, Tray 2

How to Improve Print Quality

- Remove the toner cartridge and shake it to redistribute the remaining toner.
- Clean the inside of the printer. Refer to the Troubleshooting and Maintenance section of your User's Manual.
- Make sure EconoMode is off.
- Replace the toner cartridge.
- Compare the print quality of your printout to the print quality examples shown in the Troubleshooting and Maintenance section of your User's Manual and adjust accordingly.

Interface Cables

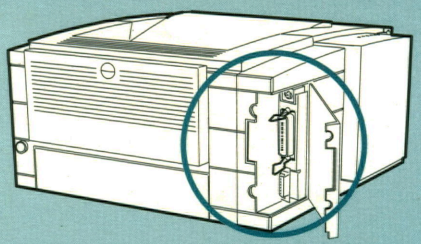

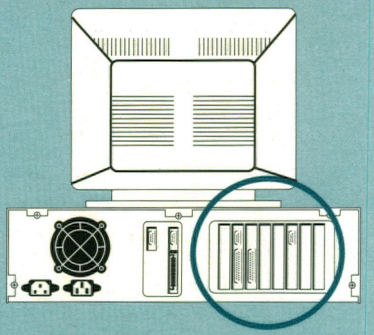

LocalTalk

Large
B-type

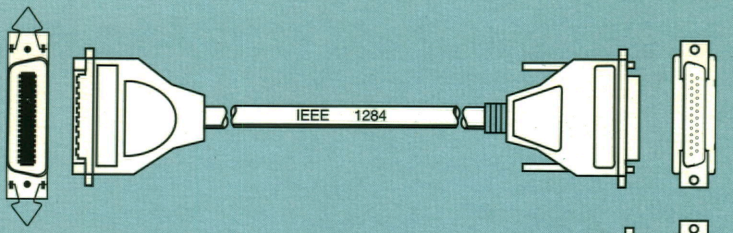

A-type

Small
C-type

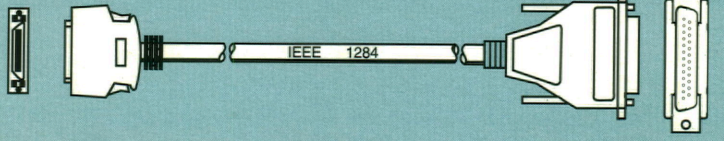

A-type

Power Cable

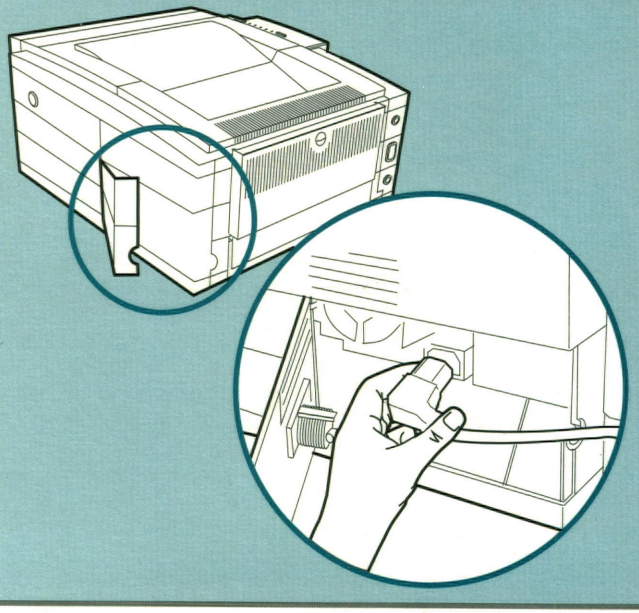

Infrared Port

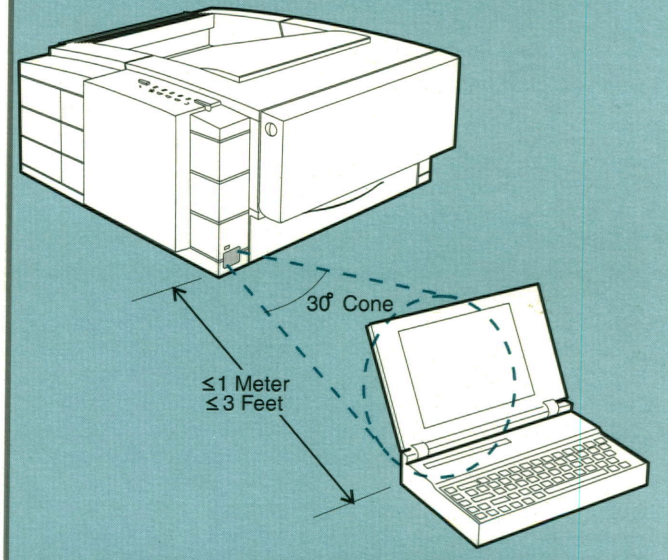

Tray 2

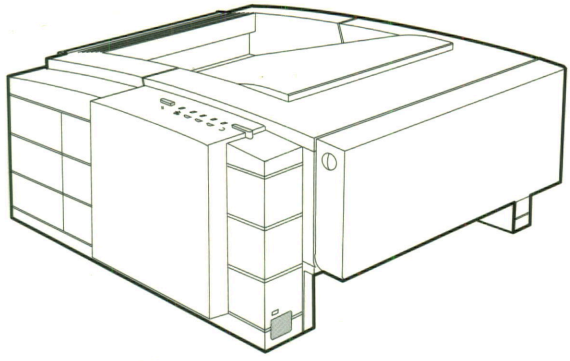

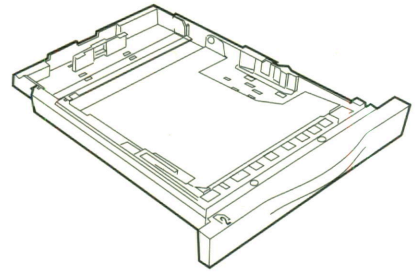

Width Adjustment

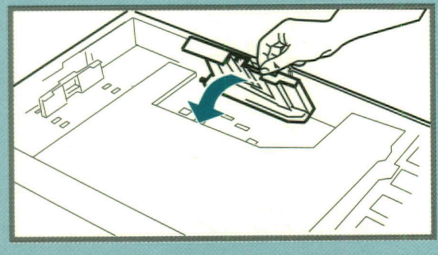

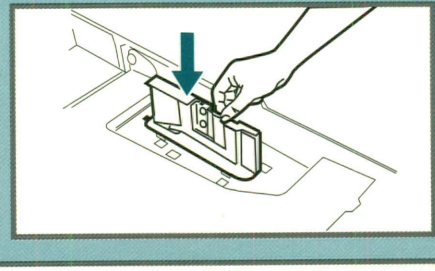

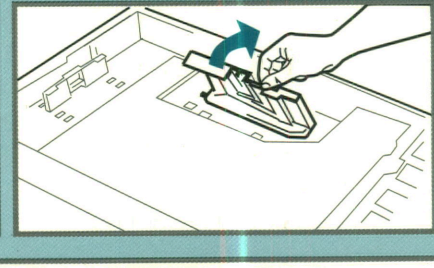

Length Adjustment

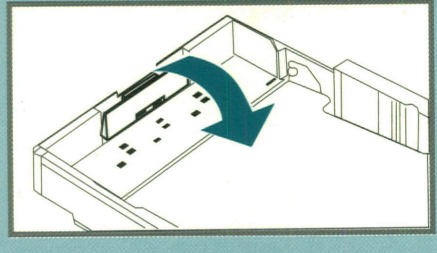

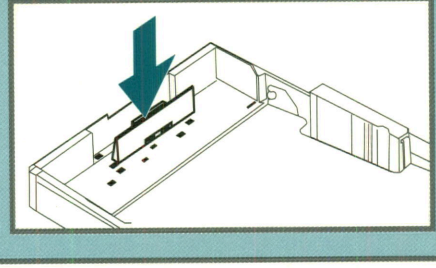

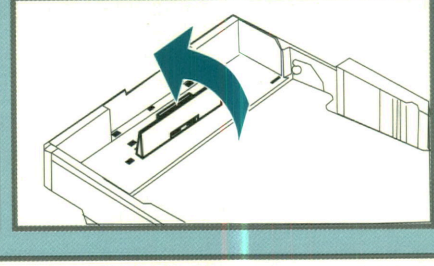

Loading Paper

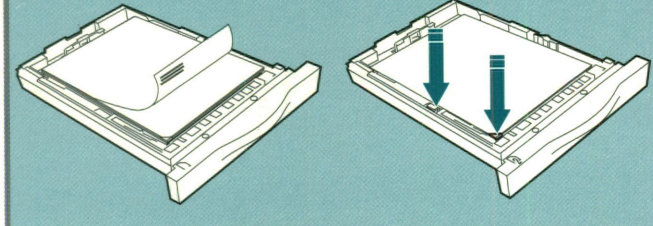

Legal Paper Adjustment

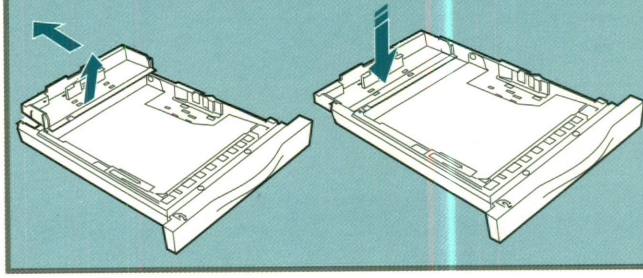

Using the Paper Trays

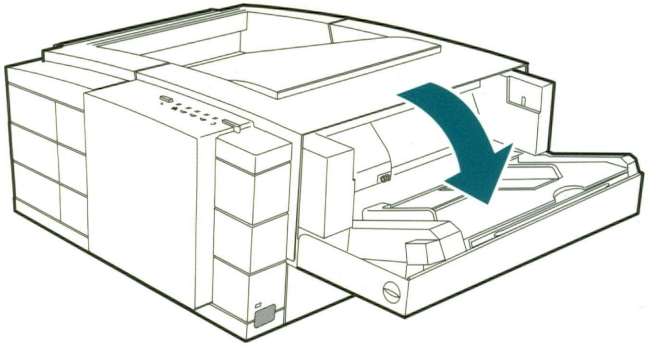

Tray 1

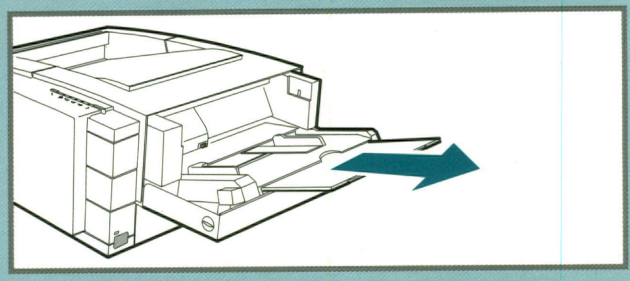

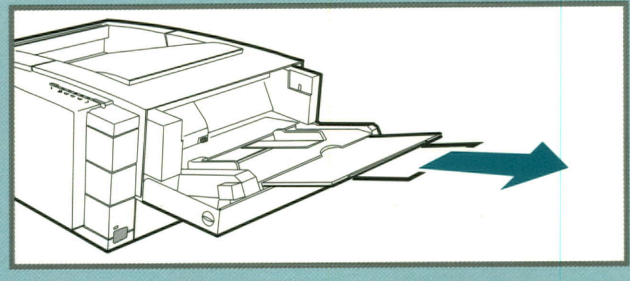

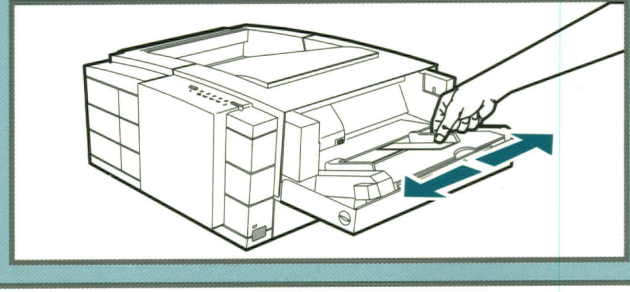

Paper Orientation

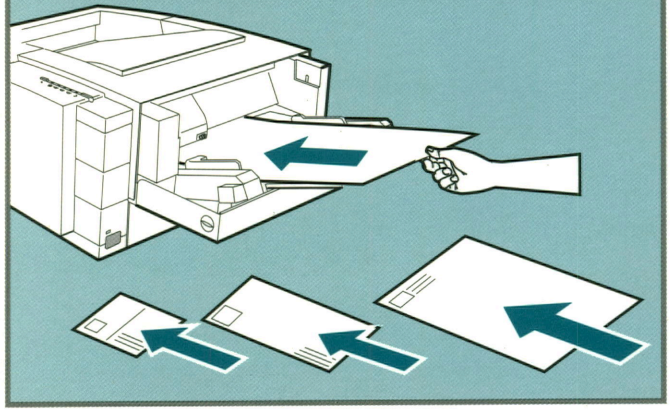

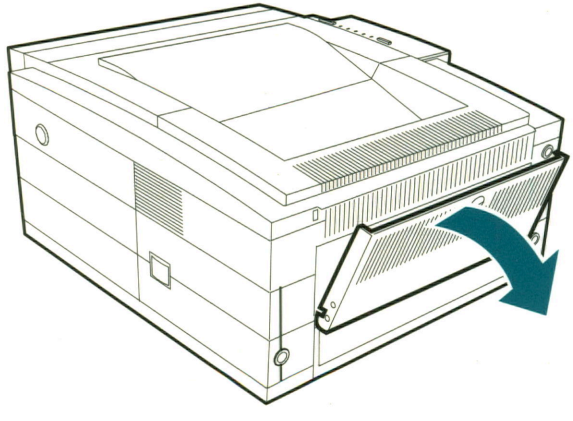

Rear Output Tray

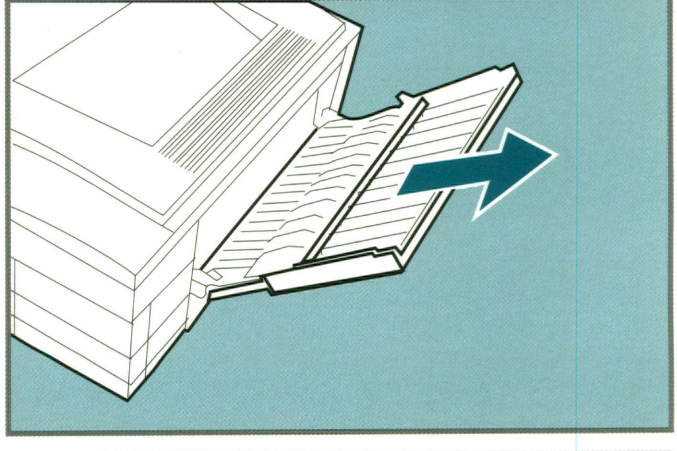

HEWLETT® PACKARD

Software Information

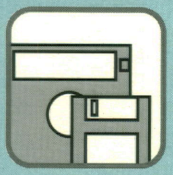

Printer Drivers

Make sure you have installed the printer drivers for the HP LaserJet 5P and 5MP. Refer to the Getting Started section of the User's Manual for more information about installing printer software.

Copyright© 1995
Hewlett-Packard Co.
Printed in USA 5/95

Manual Part No.
C3150-90933

Printed on
Recycled Paper